

LTECH

EX Series Touch Panel



EX1S
(DIM)



EX2
(CT)



EX4S
(RGBW)



Q
series
remote



F
series
remote




APP

Manual

www.ltech-led.com

System Diagram

L-BUS

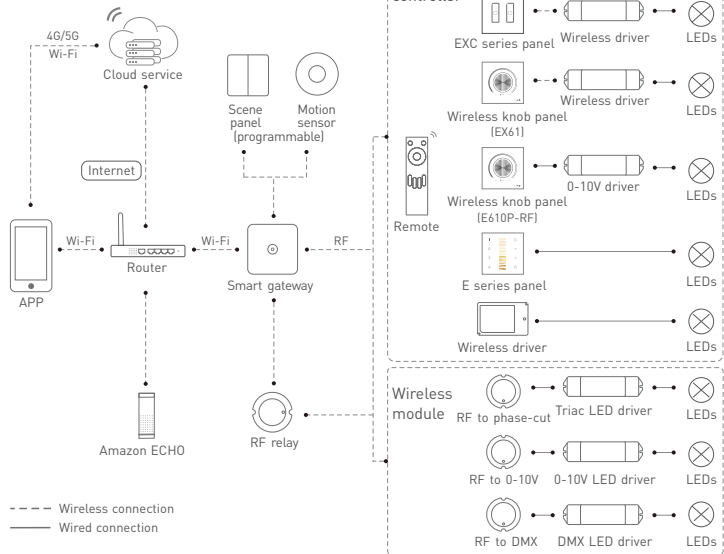

Product Features

- Adopt wireless RF and wired DMX512 protocol 2 in 1 control mode, more flexible and convenient for applications in projects.
- Leading RF wireless sync control technology realizes the consistency of dimming and dynamic color changing among multiple drivers.
- Multiple touch panels can control the same LED lights, no limit on panel quantity.
- Touch keys with chord and LED indicator.
- Adopt capacitive touch control technology makes LED dimming selection more user-friendly.
- Control the panels by a remote, or by APP when a LTECH gateway is added.

Technical Specs

Model	EX1S	EX2	EX4S
Control Type	DIM	CT	RGBW
Input Voltage	100-240V~		
Output Signal	DMX512		
Wireless Type	RF 2.4GHz		
Working Temp.	-20°C~55°C		
Dimensions	L86×W86×H36(mm)		
Package Size	L113×W112×H50(mm)		
Weight(G.W.)	225g		


 

* Product with **L-BUS** logo, supports the function of WIFI-108 advanced mode.
Advance Mode




RoHS

Product Size


Unit: mm

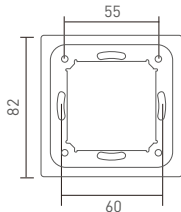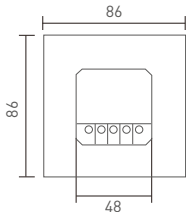


Terminals

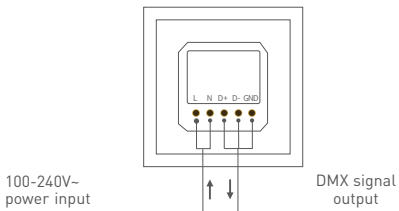


Installation Instruction

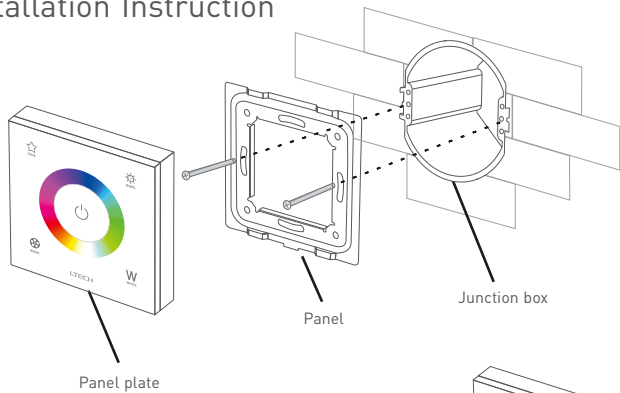

Junction boxes are as follow:

 



 

European style




86 type




Key Functions

- * When blue indicator light of  key is on, long press  to turn on/off buzzer. When white indicator light of  key is on, long press  to match code.
- * EX panel's scene-mode keys are corresponding with gateway APP's scenes, the scenes can be changed by APP or panel.

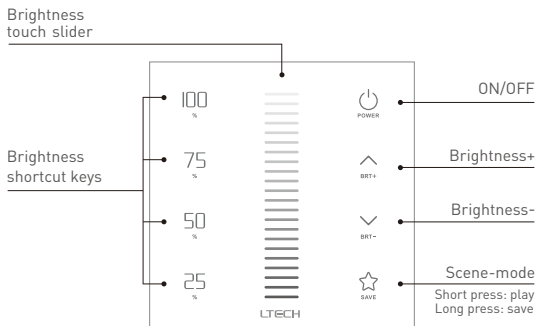



EX1S

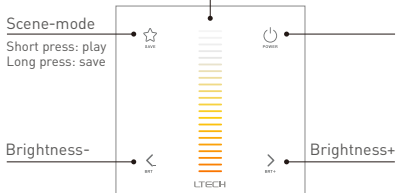CT touch slider




EX2

CT & CT2 mode of EX2 panel switch to each other:
Simultaneously long press  and  button for 3 seconds, the buzzer beeps once then switch successfully.

(Factory default: CT mode)

DMX Adresse \ Mode	CT	CT2
1	C	BRT
2	W	CT


* Please switch the color temperature mode when the switch indicator light is white.

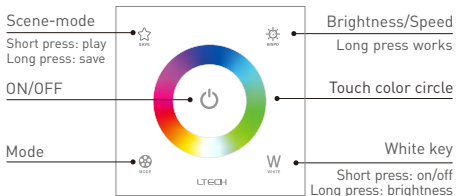

EX4S



Mode

- Static red
- Static green
- Static blue
- Static yellow
- Static purple
- Static cyan
- Static white
- RGB jumping
- 7 color jumping
- RGB gradient
- 7 color gradient
- Static black (Close RGB only)

* White light only: press  key to choose black mode, then press W key.

Match Code Sequence



DMX system wiring:

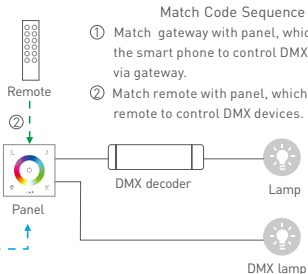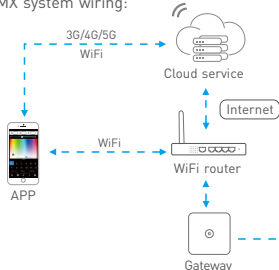

Match Code Sequence

- ① Match gateway with panel, which enables the smart phone to control DMX devices via gateway.
- ② Match remote with panel, which enables remote to control DMX devices.

Wireless system wiring:

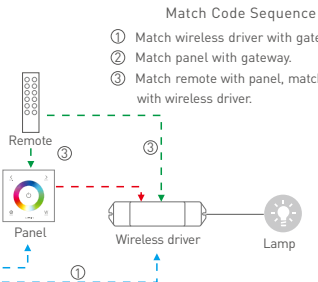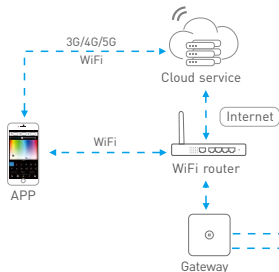


Match Code Sequence



- ① Match wireless driver with gateway.
- ② Match panel with gateway.
- ③ Match remote with panel, match remote with wireless driver.

Applications

 
DMX512 control:



Wireless control:

  


DMX Wiring

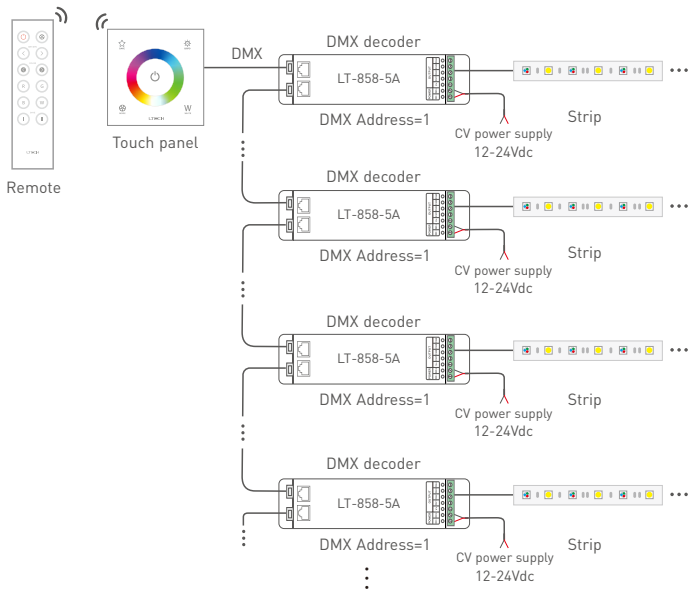





RF Wireless Wiring



 Touch panel



Remote

    


Multiple wireless receivers (F4-DMX-5A/F5-DMX-4A/F4-3A/F4-5A) can be matched with EX series touch panel within effective distance.


* To avoid the signal interference, please do not install wireless LED drivers near to a large area of metal objects or install on the metal space.

Multi-panel Control Wiring

- * After touch panel A realizes controlling the lamps, if B and C are matched with A, they can also control the lamps.
- * Linkage control is also available when the touch panels are connected to DMX decoders.

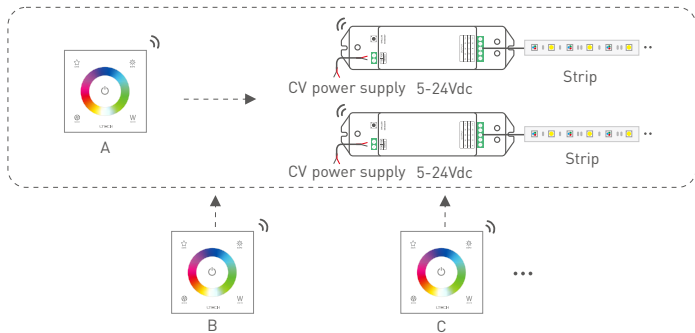


Match Code between Touch Panels

1. Assuming that B matches with A, long press  on B until all indicator lights flicker.



 2. Touch the slider on A within 15s, when indicator lights of B stop flickering, match successfully.



Match Code between Touch Panel & Remote

1. When the indicator light of the panel is white, Long press  on touch panel until all indicator lights flicker.



EX1S



EX2



EX4S

2. Match with F series remote:

Long press On/Off key on F series remote, the indicator light of touch panel stop flickering, match successfully.

EX1S works with remote F1.

EX2 works with remote F2.

EX4S works with remote F4.



F1



F2



F4

 
3. Match with Q series remote:

Long press the matching zone's "On" key on Q series remote, the indicator light of touch panel stop flickering, match successfully.

EX1S works with remote Q1.

EX2 works with remote Q2.

EX4S works with remote Q4.



Q1



Q2



Q4

* Please match/clear code when  indicator light of panel is white.

Match Code between Touch Panel & Wireless Driver

Touch panels can work with wireless driver F4-3A/F4-5A/F4-DMX-5A/F5-DMX-4A.

Method 1:

1. Power off the driver.



2. Long press On/Off key of the panel until all indicator light flicking.



3. Power on the driver, the lamps flicker slowly, please complete step 4 within 15s.




4. Short press any key or color circle / slider on the panel, match successfully.



Method 2:

 1. Short press "ID learning button" on wireless driver, the lamps flicker, please complete next step within 15s.



2. Long press On/Off key on panel until all indicator light flicker.




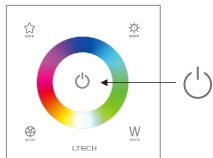
3. Short press any key or color circle / slider on the panel, match successfully.



* Please match/clear code when  indicator light of panel is white.

Match Code between Touch Panel & Gateway

1. Long press  on touch panel until indicator lights flicker.
2. Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.

 


L-BUS APP



Clear Code

Press the bottom two key on touch panel simultaneously for 6s, the indicator lights flicker several times, clear code successfully.



* Please match/clear code when  indicator light of panel is white.

Attentions

- Products shall be installed by qualified professionals.
- LTECH products are non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- Good heat dissipation will extend the working life of products. Please ensure good ventilation.
- Please check if the working voltage used complies with the parameter requirements of products.
- Before you power on products, please make sure all the wiring is correct in case of incorrect connection that causes damage to light fixtures.
- If a fault occurs, please do not attempt to fix products by yourself. If you have any question, please contact your suppliers.

Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
- Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- Beyond warranty periods.
 - Any artificial damage caused by high voltage, overload, or improper operations.
 - Products with severe physical damage.
 - Damage caused by natural disasters and force majeure.
 - Warranty labels and barcodes have been damaged.
 - No any contract signed by LTECH.
1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
 2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.